

HASLER International SA

ZI de l'Abbaye- BP 64
Rue Louis Breguet
F - 38780 Pont-Evêque



Tél : +33 (0)4 74 16 11 50
Fax : +33 (0)4 74 16 11 55 / 60
e-mail : sales.fr@hasler-int.com

Pont-Evêque, 2008-01-22

Objet : PRODUCT MATURITY INFORMATION

**OBSOLESCENCE OF PARTS FOR CPU CARDS ON HF9/HF QUADRO CONTROLLERS
(nr. 2506.6201 / 2506.7201 / 2506.8201)**

Dear Sirs,

We appreciate the confidence you have placed in HASLER by installing our HF9/HF QUADRO controllers and want to confirm you that you realize the maximum return on investment.

This announcement is to provide you with the information needed to effectively manage your installed systems.

Remaining at your entire disposal for any further request,

Best regards,

Lucien MAISSE
Technical manager
HASLER International SA
HASLER Group

**OBSOLESCENCE of parts for the CPU cards on HF9/HF QUADRO controllers
(nr. 2506.6201 / 2506.7201 / 2506.8201)**

GENERAL DESCRIPTION:

The HF9 CPU card connector (number 2506.6201, 2506.7201, 2506.8201) that takes the Beecard has transitioned to the “mature” product phase, effective immediately by our suppliers.


This connector is replaced by a SAMTEC connector on HF9 CPU cards (number 2506.6202, 2506.7202, 2506.8202) sold currently.

Two distinct parts have been manufactured to ensure compatibility:

- a new memory card (Beecard2) number 2506.9808 that carries the memory, compatible with the new HF9 CPU card connector number 2506.6202, 2506.7202, 2506.8202.
- a compatibility adapter for the new Beecard2 with the old HF9 CPU card connector number 2506.6201, 2506.7201, 2506.8201.



View of memory card and CPU

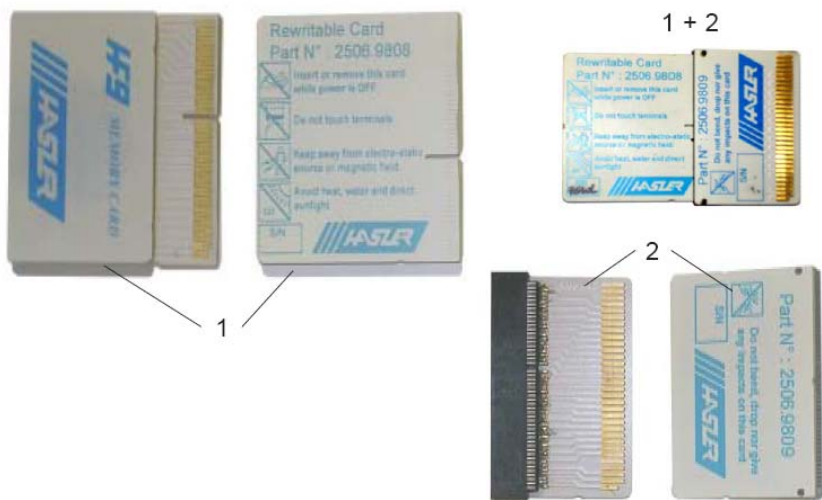

- (1) memory card Beecard2 nr. 2506.9808
- (2) adapter nr. 2506.9809 for memory card Beecard2 on an old CPU card

CONSEQUENCES FOR YOUR INSTALLATIONS

It is not possible to use memory cards numbers 2506.9805 and 2506.9807 on new CPU cards.

If an old CPU card must be replaced by a new one, the recording of parameters on a new memory card **must be carried out first** as explained in our manual ref. BEECARD.943.001-E.a, enabling the transfer of parameters between the old and the new CPU card.



INSTRUCTIONS

HASLER recommends, in order to avoid any memory card transfer problems, the acquisition of the same quantity of Becard 2 memory cards (Ref. 2506.9808) as the old memory cards (Réf. 2506.9809).

The recording of parameters on these new memory cards will guarantee transfer during troubleshooting on new CPU cards, in total safety.

HASLER's actions

In order to warn your maintenance operators, we will add in all our CPU cards offers the obsolescence information and will join a commissioning manual together with the supply of the CPU card.

HASLER thanks you very much for your comprehension and remains at your entire disposal to answer to all your possible questions. Your permanent contact is also available to complete the transmitted informations on this document or on our web site.

Best Regards

Lucien MAISSE
Technical manager
HASLER International SA
HASLER Group